


LEOPAR
BLACK SHINE



High specification
professional
straightening iron.

Triple coating and
less weight.




User Manual
Model No. M-071060

- Thank you for purchasing this product.
- For safety reasons, please read this user manual and use the product correctly.
- There may be unnotified changes in colour or design for improvement of performance or product quality.
- When making requests for repairs please attach the product warranty included in this user manual.

Precautions

Safety related matters are classified as Warnings or Cautions as shown below depending on the severity of the damage that could occur if an incident happens.

 **Warning** Serious injury or death may occur if instructions are violated.

 **Caution** Serious injury or product damage may occur if instructions are violated.

This product is a household appliance.

Please read this manual and follow the instructions carefully to prevent unexpected danger or damage due to improper use of the product.



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



- **WARNING** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- Do not disassemble the product.
- Dispose of the product in a designated location.
- Even if the power is off, if there is water nearby, unplug the product and store it in a dry location.
- Electrical circuitry in the bathroom must be equipped with a residual current device (RCD) that does not exceed 30mA of rated electric current for additional protection.
- If the inside of the product becomes red when using the product, immediately stop using it and unplug the cord.
- Check that the product is plugged in correctly.
- Do not use other electric heaters simultaneously on the same outlet, this could cause a fire due to overheating.

Read this user handbook carefully for your safety and correct use before using the machine

- This machine produces heat during operation. Take care to avoid contact with the heating plate. Beware of the danger of burns.
- Please dry your hairs before procedure. Styling may be not perfect on wet hairs. We recommend you towel-dry. Be careful of scalp burns and air damages caused by hot steam.
- Procedure with high temperature (180°C~220°C) is easier to make hairs damaged.
- Be careful not to wet the appliance. Do not use it in humid places including bathrooms. Electric accidents may occur.
- After use, wait the heater plate to be cooled. Keep things made of non-heat-resistant materials away from the device.
- Do not pull off the power cable. Pressure to the power code or severe shocks may lead disorder.
- The heating plate or the surface requires cleaning, switch off the mains, unplug it, and wait it to be cooled.

Wipe it with a soft cloth. You cannot use solvent like benzene and thinner and wire brushes.

- During operation, if it is wet with water or perm ingredient, stop using it immediately and contact After-sales Service or your dealer.
- Do not attempt to use the machine anymore if you find out any damages or cable cut-off. Contact After-sales Service.

The manufacturer declines all liability for damage resulting from repair or replacement by the users.

- The manufacturer will accept no responsibility for damage caused by improper use or other purposes stated not in the instructions.





Plug the power cable in the socket not to be twisted.
The buzzer sounds; it is normal.



Press the Main button.
Default setting temperature 160°C appears in the FND temp display.



Press Temp button (+, -) to set the temperature users want.
During reaching the set temperature, the temp display indicates real-time temperature.
When the temperature is set, the buzzer sounds.



Make your hairs neat and place them to the center of the heating plate.
Grab them lightly and comb with your fingers.
Do not stop combing or make fast; otherwise, marks remain on your hairs or you cannot get the style you want.



If you disuse for 30 minutes, the device enters in the sleep mode. ([SLP] displays and the heater is off.)
After then, alarm buzzer sounds for 30 minutes, with each 1 minute. If you want to reuse in the sleep mode, touch the temp display or press the button.



After transferring to the sleep mode (SLP displays), and the appliance is still not performing for another 30 minutes, the main will be automatically switched off.
Press the Main button.



After use, switch the appliance and unplug the cord from the power supply.
Risk of burns! Wait the heater plate to be cooled.

Errors displays [888] and the appliance stops working. Stop using and contact to A/S center.



3-way black coating

Black shine's heating plate with 3-way black coating – Graphene, black diamond and ceramic.

Get softer sliding and topmost styling!



Independent control

Fast preheating and temperature recoverability

With the independent control way, lesser preheating time and more excellent temperature recoverability. It minimizes temperature change in procure to avoid hair damage.



Cushion & Tilting

Not only minimizing hair cut-off by applying cushion and tilting method but distributing heat to hairs for optimal procedure.



Ergonomic design

Reducing fatigue in long hours by ergonomic design and special technology.



Soft 360° rotate code

For users, it rotates 360° with untwisted code, which extends product lifespan.



No anxiety! Applying a safety device

Designed to prevent electric issues and protect users through a hardware device and software control.



Safe design! Sleep mode


If you disuse for 30 minutes, the device enters in the sleep mode. ([SLP] displays and the heater is off.) Any electric problems can be avoided.



Free voltage

You can easily use it without a transformer in the world (100~240V). (You may purchase a transforming adapter. Please contact us.)

PART DESCRIPTION

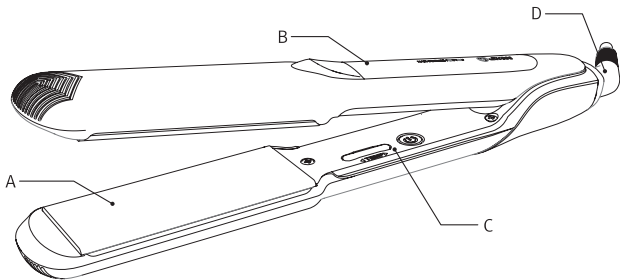

A - heating plate: minimizes hair damages with 3-way black coating and tilting cushion.

B - FND temp display: indicates the temperature of the heater plate (100~220°C)

C - Switch: controls the device with the mains and the temperature switch.

D - 360° rotate code: prevents the code from twisting in procedure.

THECNICAL DATA

Product name	LEOPA-R BLACK SHINE
Model type	M-071060
Voltage	Free Voltage (100~240V) 50/60Hz
Absorbed power	25 W
Control type	Micom independent control
Heater	far-infrared ceramic heater
Temp range	100°C ~ 220°C
Code length	3 m
Size	263 x 37.8 x41mm
Weight	176 g
Product	IRON HAIR

Manufactured by JMW, South Korea

EC Declaration of conformity

BALTASAR RODRIGUEZ LLORENTE, S.L.
C/Marina nº 155, local 6 08013 – Barcelona

WE DECLARE under our sole responsibility that the unit/device:

LEOPA-R BLACK SHINE

Make/Manufacturer

CBR Professional

Model

M-071060 LEOPA-R BLACK SHINE

Year of Manufacture

2019

complies with the norm(s) or published standard(s) below:

EN 60335-1 EN 60335-2-23 EN 62233 EN 61000-3-2 & 3-3 EN 55014-1 & 2

and complies with the key requirements and Directive(s) below:

The EU Low Voltage Directive ("LVD," 2014/35/EU)

The EU Electromagnetic Compatibility Directive ("EMC," 2014/30/EU)

The EU Waste Electrical and Electronic Equipment Directive ("WEEE," 2012/19/UE)

The EU RoHS2 Directive (2011/65/UE)

Name, surname and position of the person authorized to prepare the Technical Dossier and sign this declaration:

Baltasar Rodríguez Llorente

Place and date

Barcelona, 26 de febrero de 2019

Signature

A handwritten signature in black ink is written over a rectangular stamp. The stamp contains the text "CBR PROFESSIONAL" in large, bold letters, with "Marina, 155, local 6 08013 BCN - Spain" in smaller text below it.

Product Warranty

✳ Before using the product please read the user manual.

REPAIR REQUEST FORM

LEOPA•R BLACK SHINE

Model No.

Customer

Customer name

Address

Telephone No

Purchase date

Name and address of store

Year Month Day

Warranty period from day of purchase

Telephone No

Reason for repair request